

# 857/891 Escort

PORTABLE ZERO LLC  
26045 Birch Bluff Road  
Shorewood, MN 55331  
Email: [info@portablezero.com](mailto:info@portablezero.com)  
[www.portablezero.com](http://www.portablezero.com)

Includes: 2 side frames, 4 mounting screws M4 X 12MM, 8 self-adhesive rubber pads, carrying strap and instructions.

## Assembly:

Step 1: Install the 4 rubber pads on the inside (towards radio) of each side frame as shown in figure 1. The rubber pad location does not need to be exact.

Step 2: Install the side frames on the radio with the long frame extensions facing forward.

Step 3: Place a side frame against the radio and insert 2 (M4 x 12mm) mounting screws through the holes in the side frame and into threaded mount hole in the radio and hand tighten.

Install the second side frame in the same manner then snug up the screws. **Caution: Do not over tighten the mounting screws. Just moderate tightening is required. The tapped holes in the radio can be stripped if overtightened.**

Step 4: Attach the carrying strap as desired.

Note: For FT-891, install 2 black nylon spacers (included) under your rear rubber feet on your transceiver to raise the back of the escort side frames.

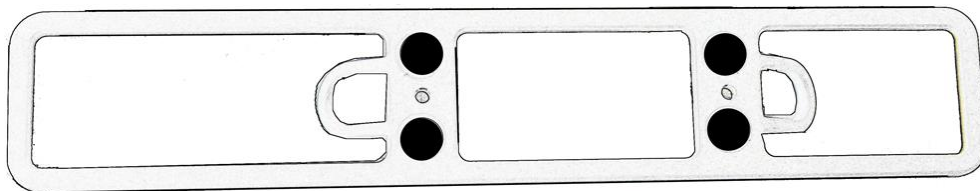


Figure 2

Install side frame with long frame extension towards the front of radio.

Figure 1

Install 4 rubber pads on inside (facing radio) of both side panels as shown above. Pads should be placed about 3/16 above and below mounting holes. Pad location does not need to be exact.